

- 1. Film ejection slot 2. Feature button

 - 3. Power button/LED
 - 4. Micro USB port cover
 - 5. Micro USB port
 - 6. Reset button*1



7. Film door lock

8. Side LED 9 Film door

*1 If the printer does not work properly, press the reset button to reset the printer.

Specifications

Exposure resolution

Interface

Power supply

Power consumption

Recording method	3-color exposure with OLED
Film used	FUJIFILM INSTAX MINI Instant Film (sold separately)

12.5 dots/mm (318 dpi, 80 µm dot pitch)

Image size 2.44 in x 1.81 in / 62 mm x 46 mm

800 × 600 dots Exposure pixel count

RGB gradation of 256 colors Exposure gradation

Bluetooth Ver. 4.2 (BLF)

JPEG, PNG, HEIF, DNG

Printable image format

Printing time Image recording - photo output (fed out): Approximately 15 sec.

Possible number of printed Approximately 100 (from full charge; number of prints depends on the usage conditions.)

images

Lithium ion battery (internal type: not removable)

Approximately 3 W

Charging time Approximately 80 to 120 minutes (depending upon environment temperature at time of

Temperature: 41 °F to 104 °F (5 °C to 40 °C) Operating environment

Humidity: 20% to 80% (no condensation)

Main unit dimensions 3.62 in x 1.43 in x 4.91 in / 91.9 mm x 36.4 mm x 124.8 mm (excluding projecting parts)

Main unit mass Approximately 0.46 lbs / 210 g (excluding INSTAX MINI film pack)

Micro USB cable (BOD700-200, Length: 30 cm) Supplied accessory