[EN] Instructions for use: (see 1)


The initial password of the password lock is 0-0-0 (0-0-0-0) (0-0-0-0-0-), the set password is aligned with the lock marker line, and the lock beam is opened when pulled up.

Set new password method: (see 2)

The password lock opens the new password in the open state. Pull up the lock beam to rotate 180 degrees to the end. Turn the password wheel, set the new password to the marking line, then pull up the lock beam, that is, the password is set successfully.

Locking method:

By pressing the lock beam. Turn the password wheel at will and disturb the password.

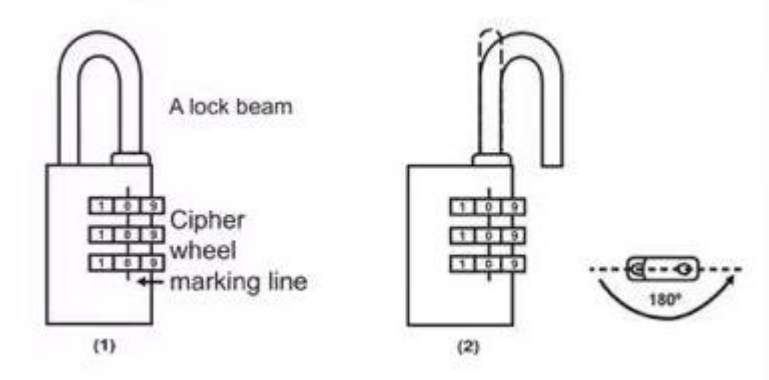

[LT] Naudojimo instrukcija: (žr. 1)

Pradinis kodinės spynos slaptažodis yra 0-0-0 (0-0-0-0) (0-0-0-0-0-), nustatytas slaptažodis sulygiuotas su kodinės spynos žymėjimo linija, o spynos ąselė atsidaro pakėlus aukštyn.

Slaptažodžio keitimas: (žr. 2)

Slaptažodį galima keisti atrakinus spyną. Patraukite spynos ąselę, kad pasisuktų 180 laipsnių kampu iki galo. Pasukite slaptažodžio ratuką, nustatykite naują slaptažodį sulygiuodami jį su ženklinimo linija, tada atstatykite spynos ąselę į pradinę padėtį. Slaptažodis nustatytas sėkmingai.

Užrakinimo būdas:

Spyna užrakinama paspaudus spynos ąselę. Sumaišykite skaičius, ties ženklinimo linija, kad nebesimatytų jūsų slaptažodis.

