


ASSEMBLY INSTRUCTION

DOMOLETTI
FURNITURE

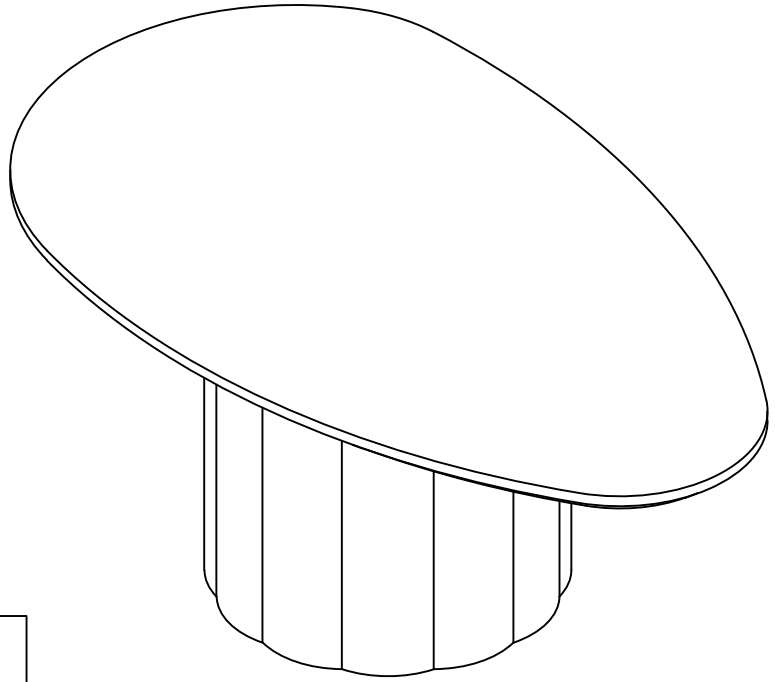


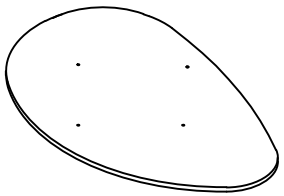


Ⓐx1

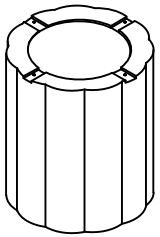


Ⓑx1

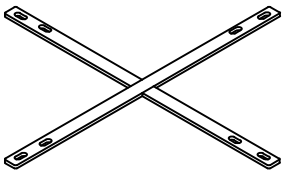


Ⓒx1




①x1



②x8
Bolt M6x20




③x8
Washer M6




④x4
Plastic Washer M8

ASSEMBLY INSTRUCTION

Step 1

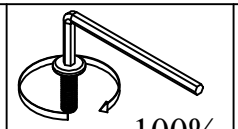

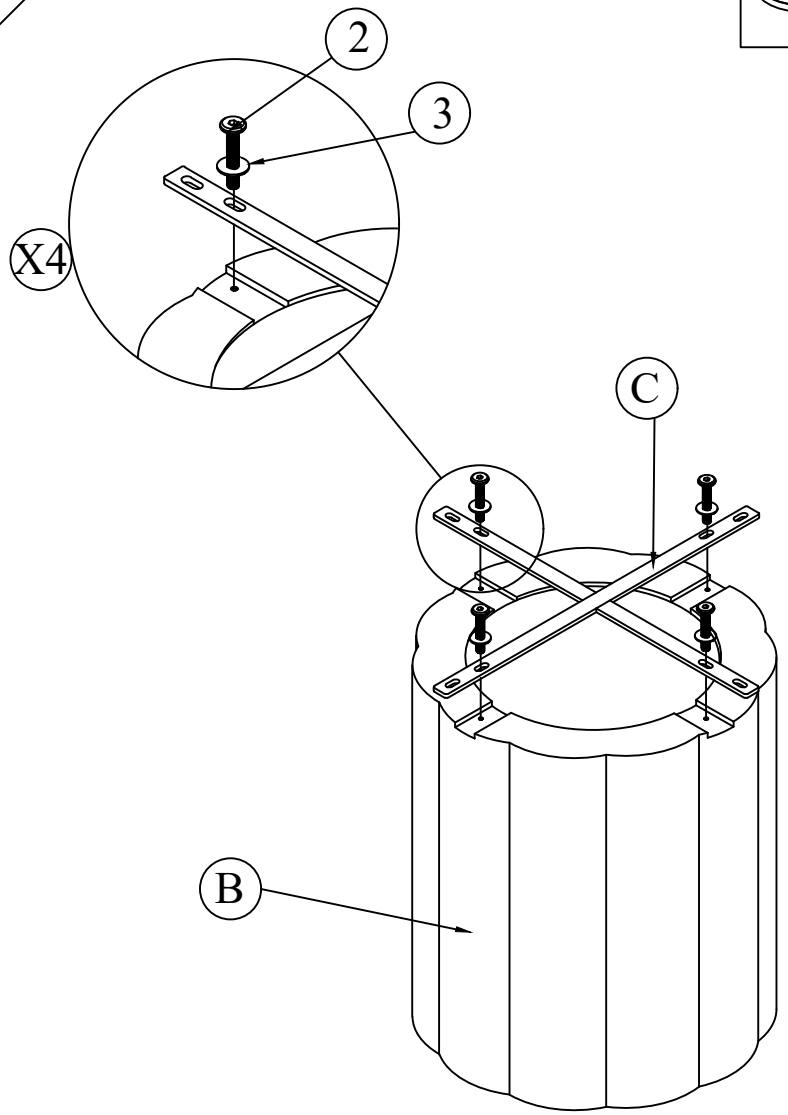

Step 2

