

DOMOLETTI
FURNITURE

OUTDOOR FURNITURE SET














EE AIAMÖÖBLI KOMPLEKT
LV DĀRZA MĒBEĻU KOMPLEKTS
LT LAUKO BALDŲ KOMPLEKTAS
RU КОМПЛЕКТ САДОВОЙ МЕБЕЛИ

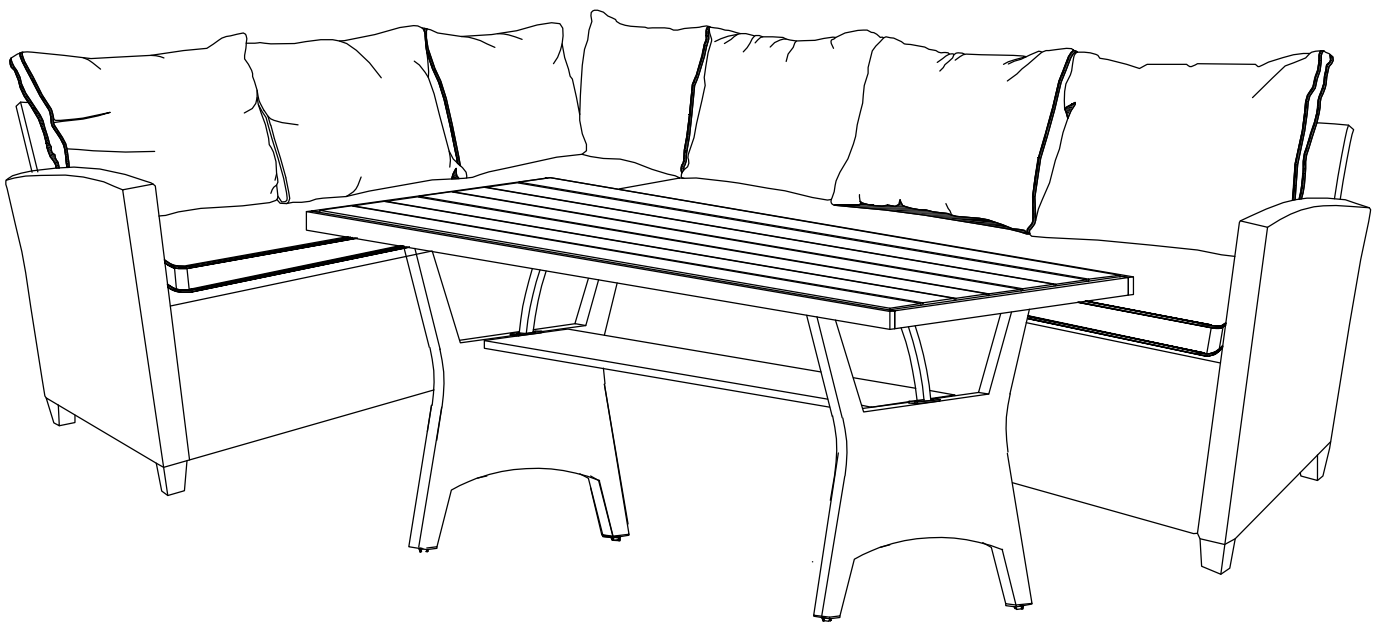





ASSEMBLY INSTRUCTION

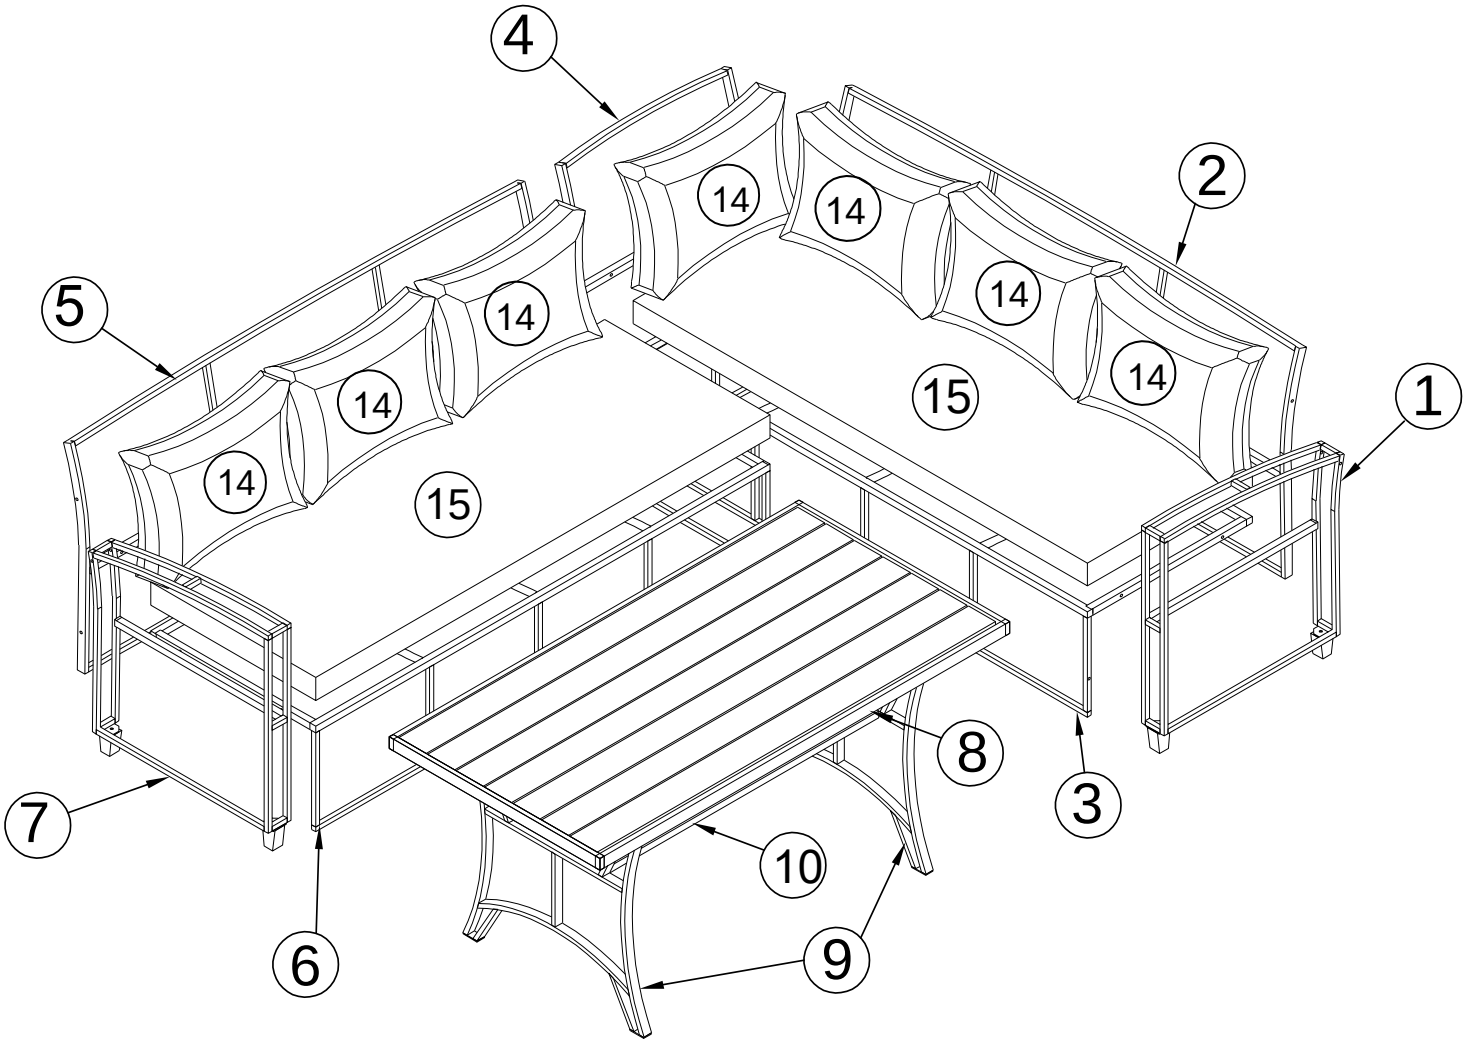

Part List:

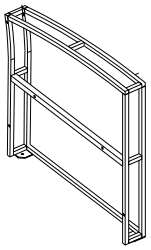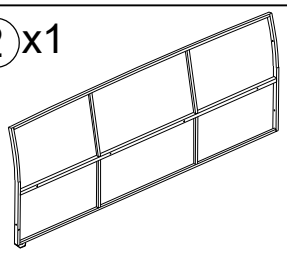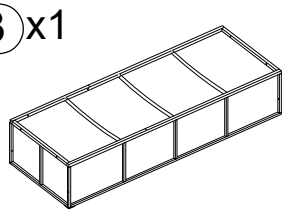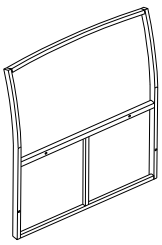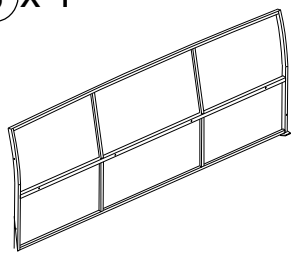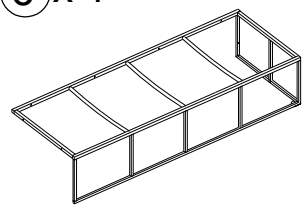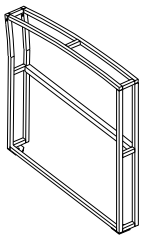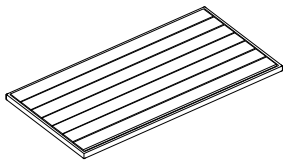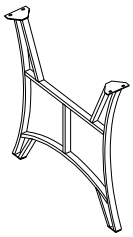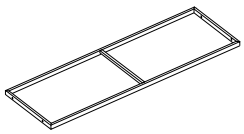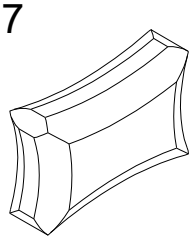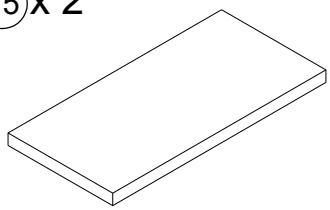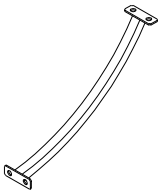
①x1 	②x1 	③x1 	④x 1 
⑤x 1 	⑥x 1 	⑦x 1 	⑧x 1 
⑨x 2 	⑩x 1 	⑭x 7 	⑮x 2 
⑰x 2 			


Hardware List:

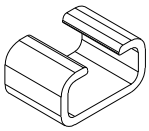① x 8 pcs Extra 2 pcs  BOLT M8 x 25MM	② x 8 pcs Extra 2 pcs  FLAT WASHER Ø18 x1mm	③ x 36 pcs Extra 4pcs  FLAT WASHER Ø16	④ x 4 pcs Extra 1 pc  BOLT M6 x 30MM
⑤ x 20 pcs Extra 2 pcs  BOLT M6 x 40MM	⑥ x 2 pcs Extra 1 pc  BOLT M6 x 50MM	⑦ x 8 pcs Extra 1 pc  BOLT M6 x 60MM	⑧ x 2 pcs  BOLT M6 x 120MM
⑨ x 2 pcs  PLASTIC CONNECTOR	⑩ x 8 pcs  Foot	⑪ x 2 pcs  ALLEN KEY	⑫ x 8 pcs Extra 2 pcs  BOLT M6 x 15MM

STEP 1


3	 FLAT WASHER Ø16	5
5	 M6x 40MM	5

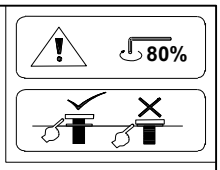


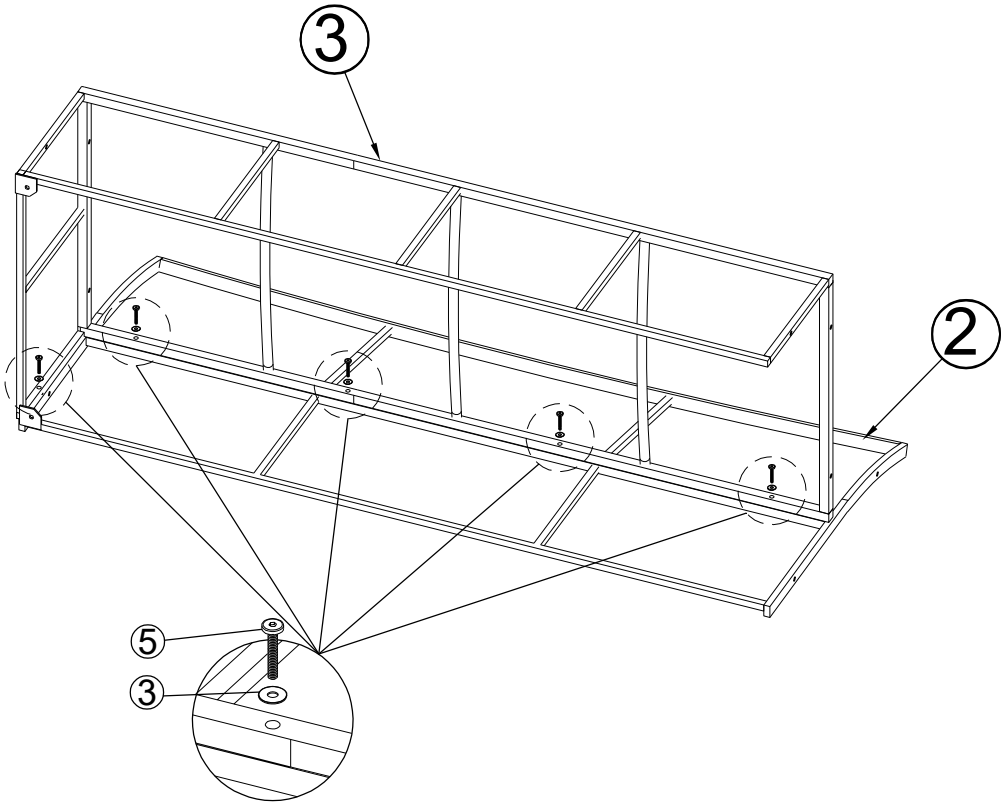

STEP 2

3	 FLAT WASHER Ø16	3
5	 M6x 40MM	3

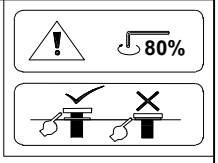


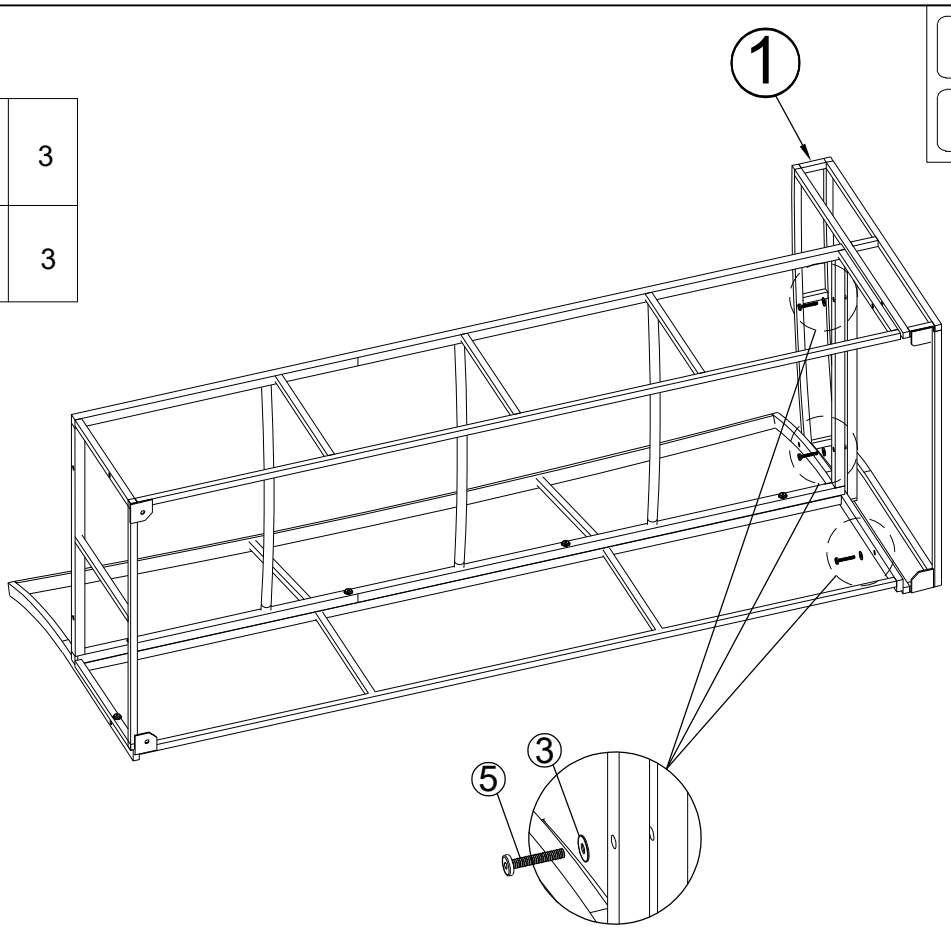

IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.


STEP 3

3	 FLAT WASHER Ø16	1
8	 M6x 120 MM	1

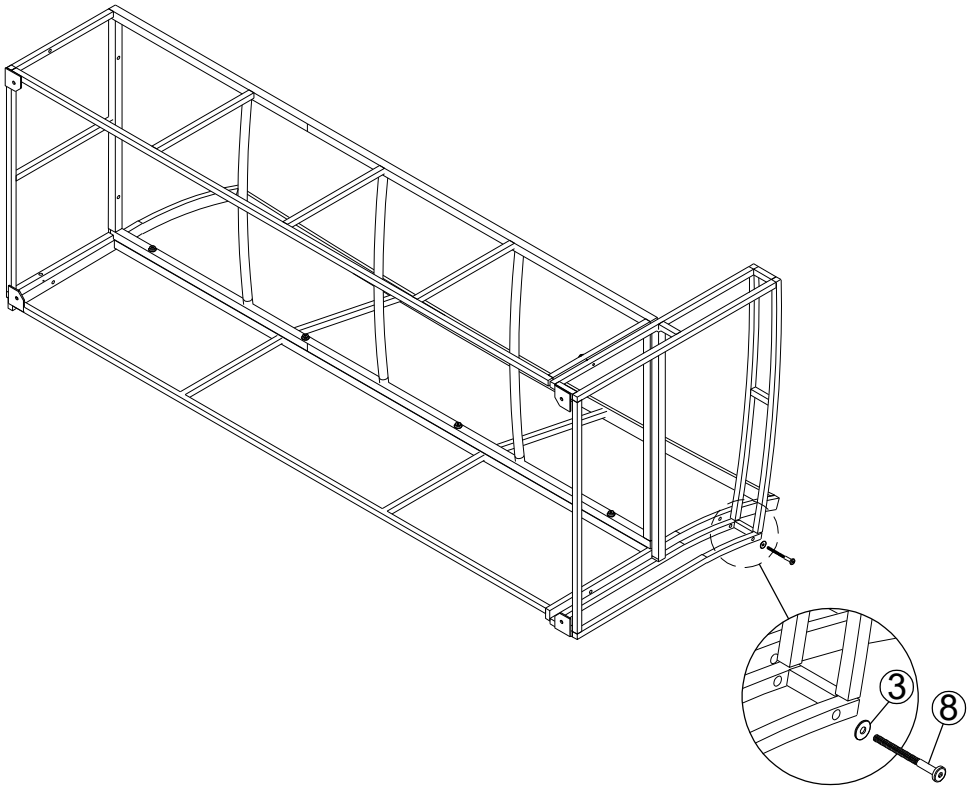

STEP 4


3	 FLAT WASHER Ø16	3
5	 M6x 40MM	1
6	 M6x 50MM	2

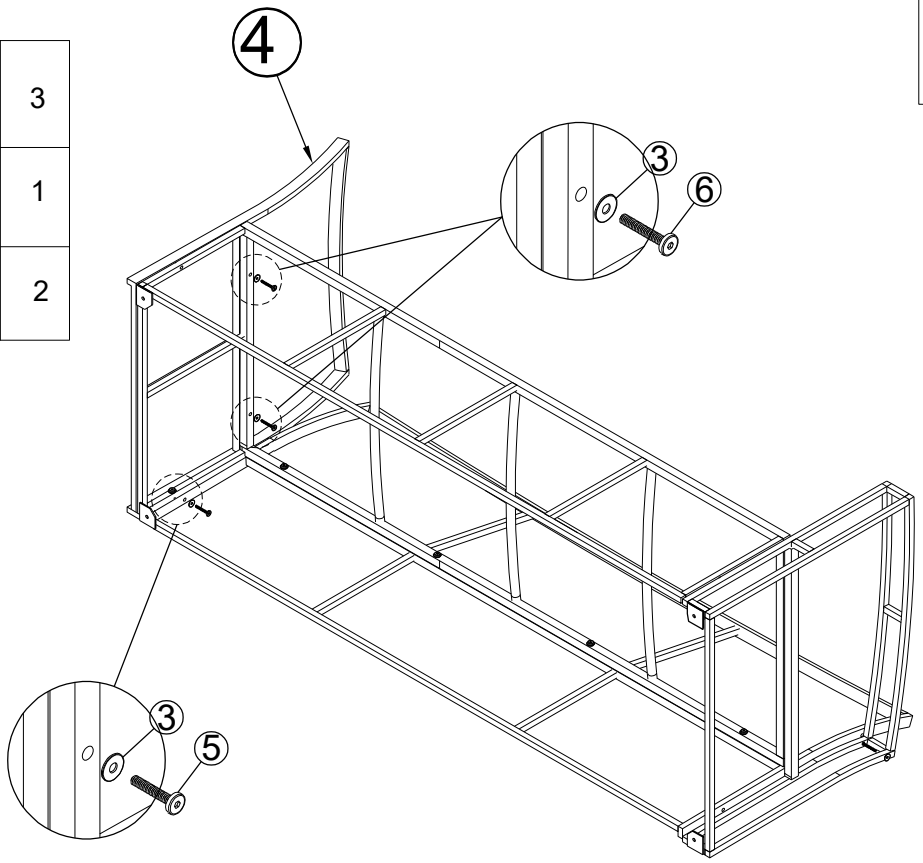


IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.

STEP 5


3	 FLAT WASHER Ø16	2
5	 M6x 40MM	2

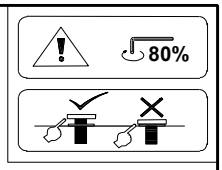


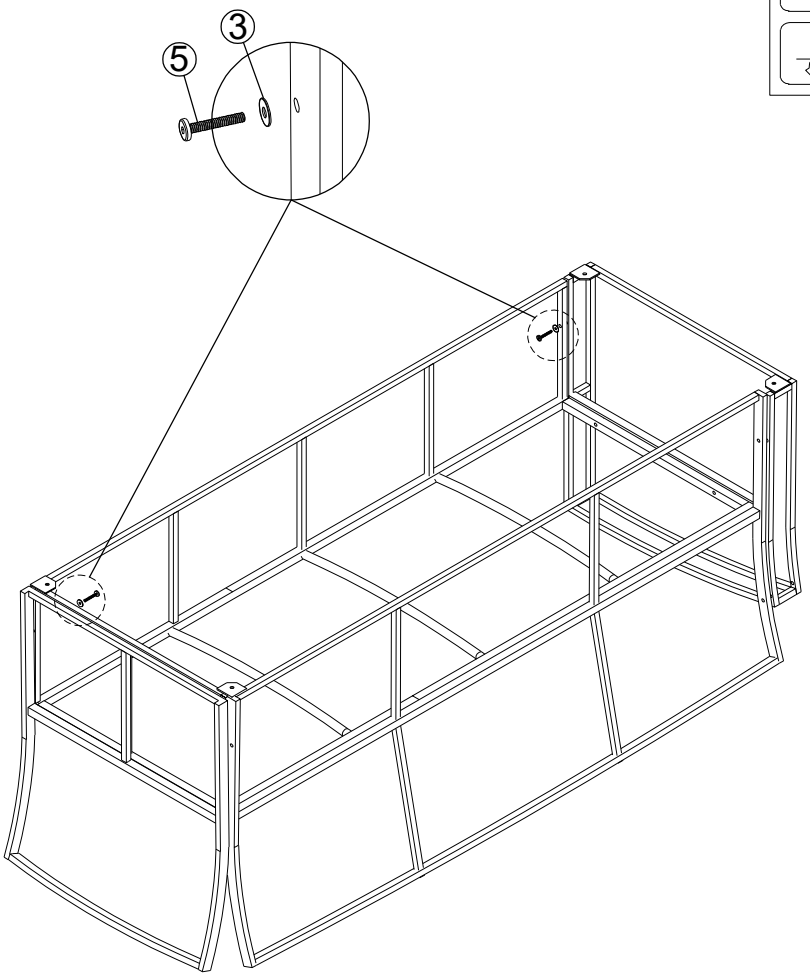

STEP 6


7	 BOLT M6 x 60 MM	4

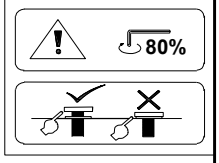

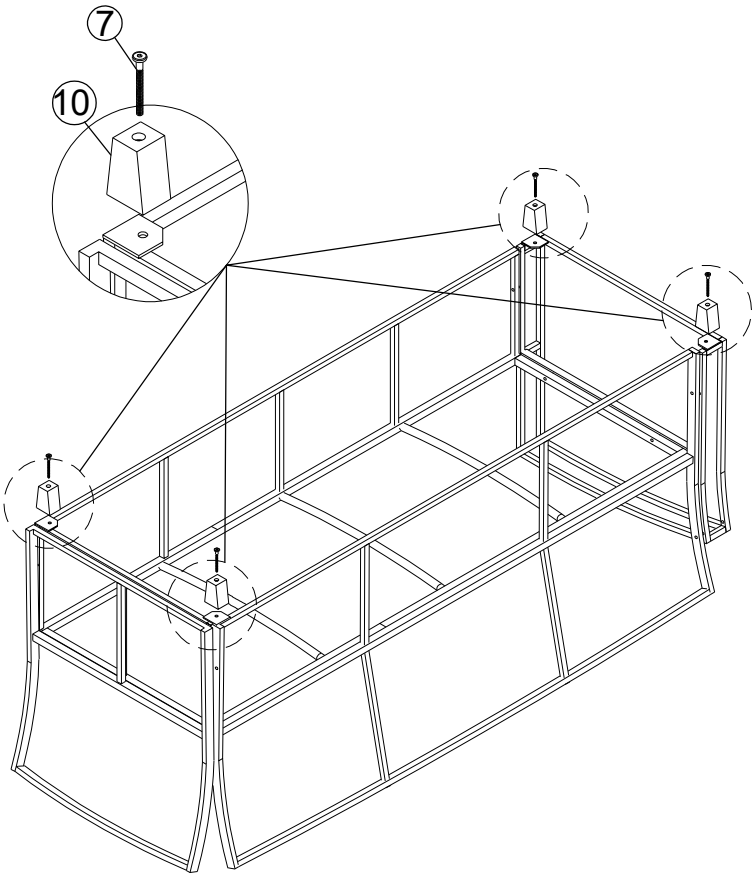


IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.

STEP 7

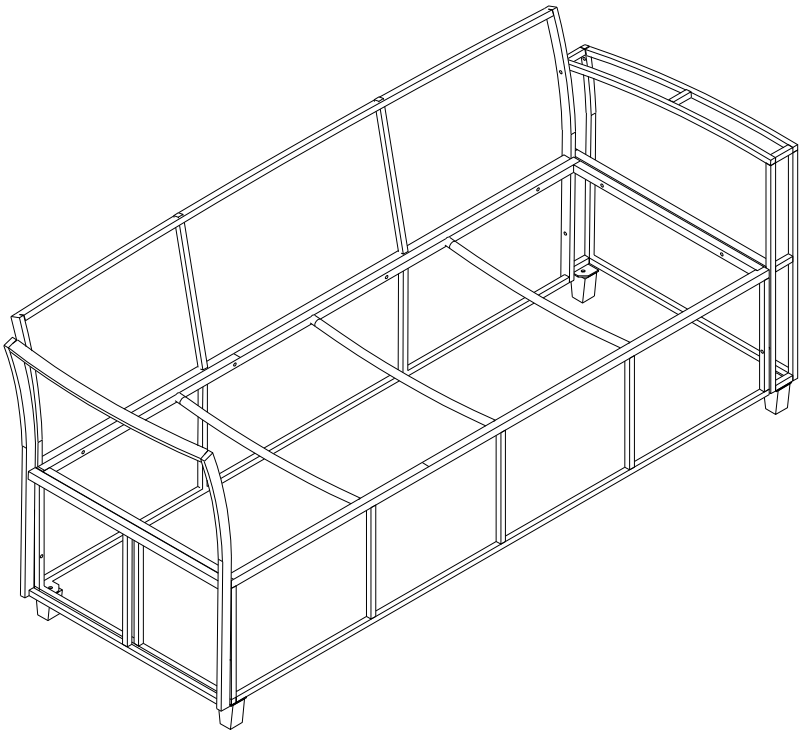

STEP 8


3	FLAT WASHER Ø16	5
5	M6x 40MM	5

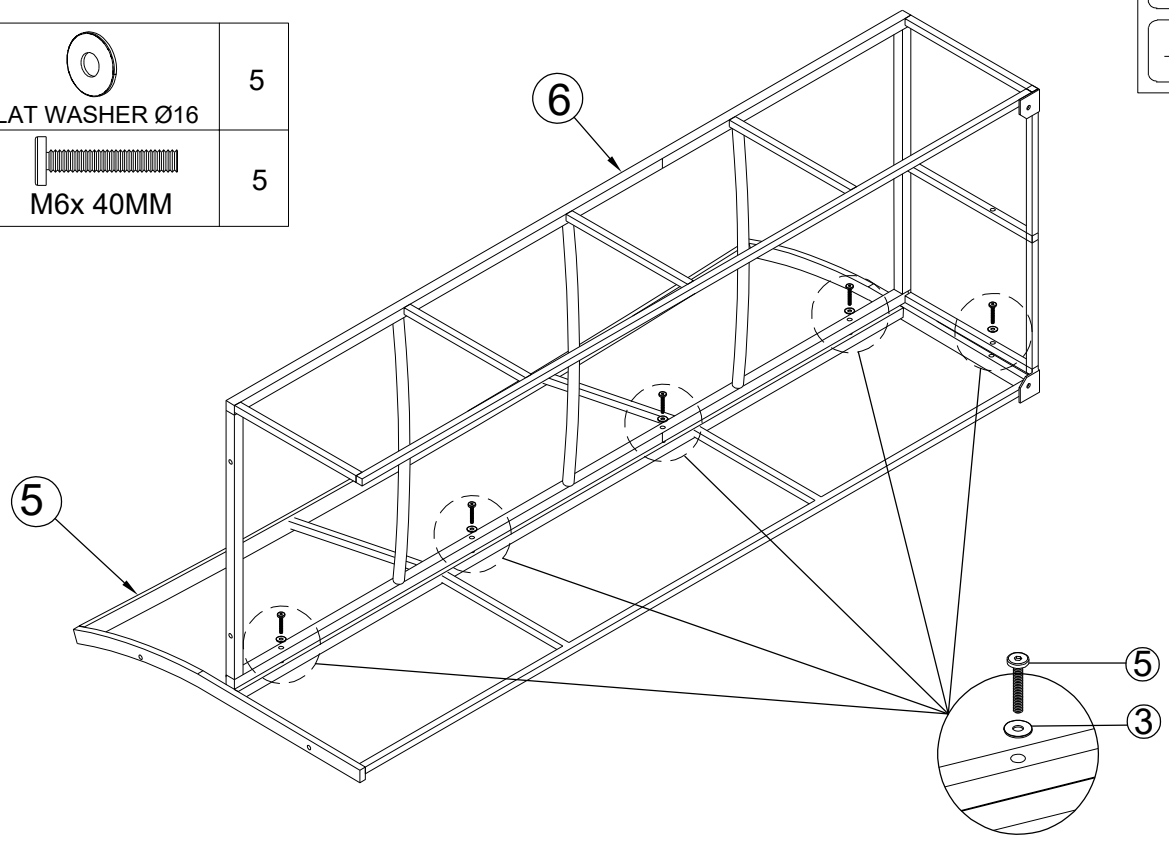

IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.


STEP 9

3	FLAT WASHER Ø16	3
5	M6x 40MM	3

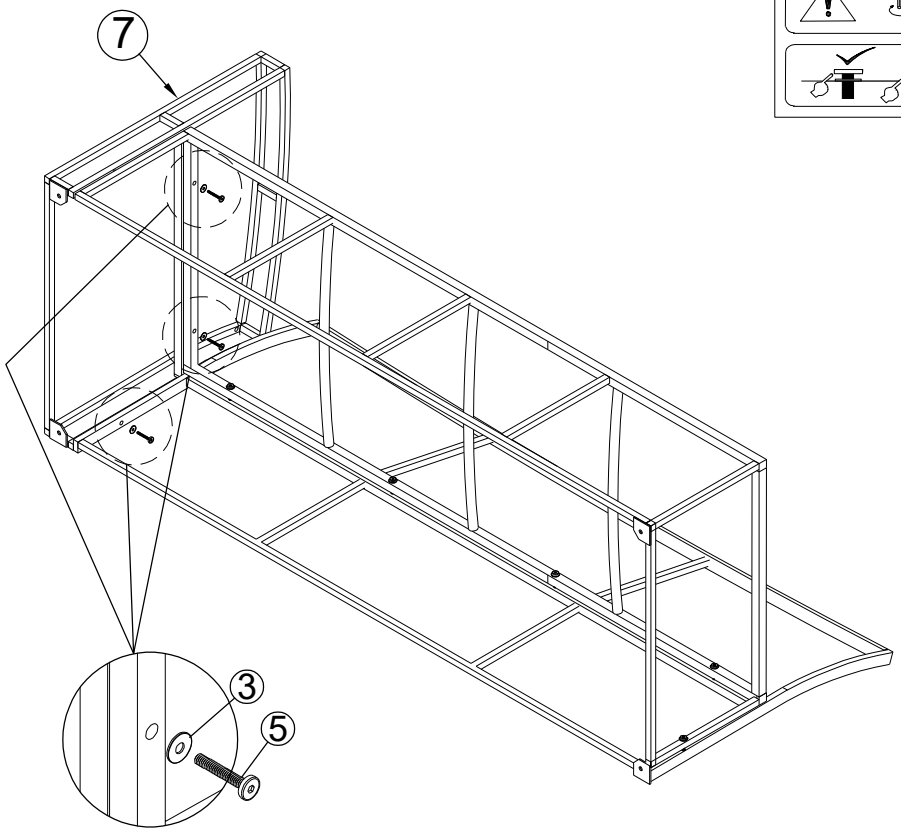

STEP 10


3	FLAT WASHER Ø16	1
8	M6x 120 MM	1

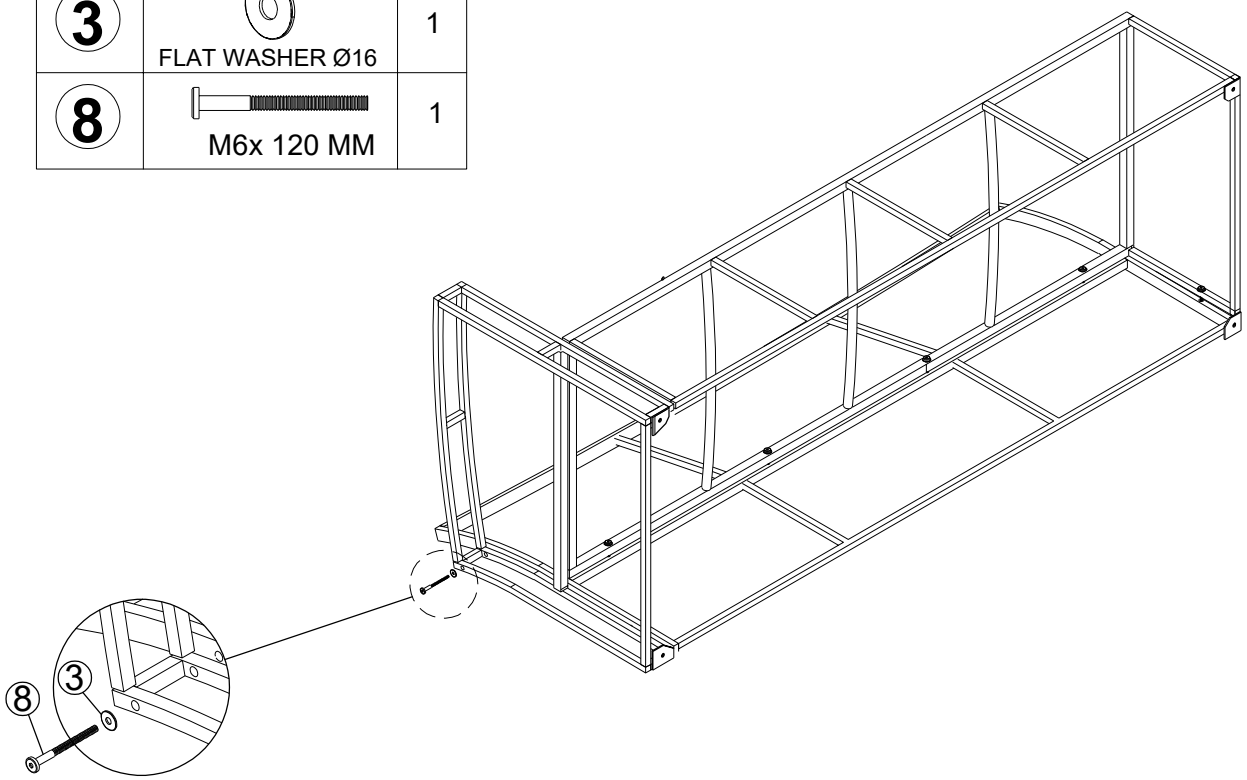


IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.

STEP 11


3	 FLAT WASHER Ø16	1
5	 M6x 40MM	1

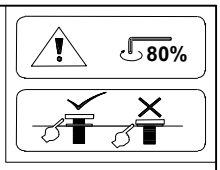


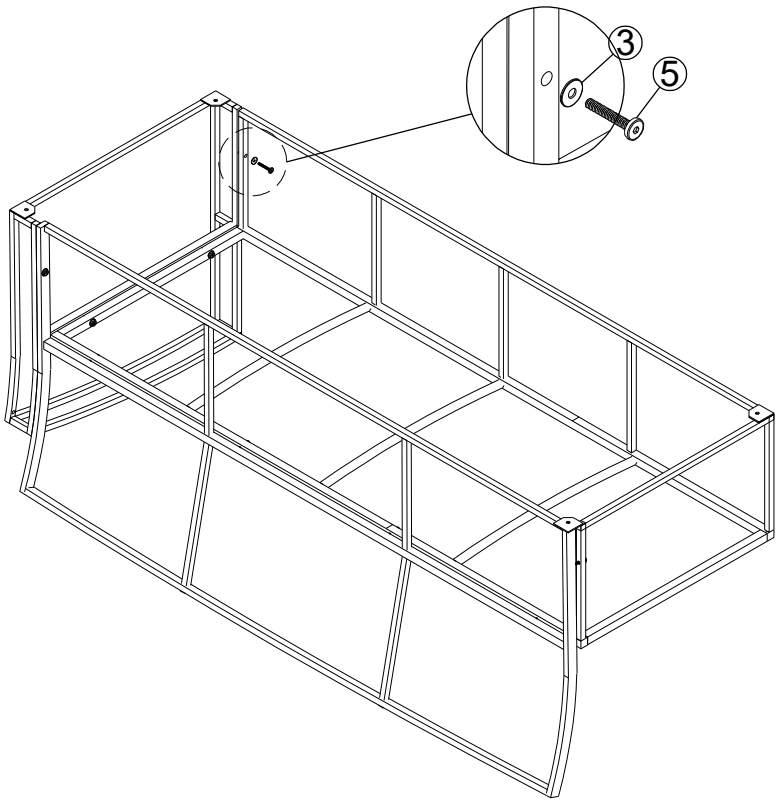

STEP 12


7	BOLT M6 x 60MM	4

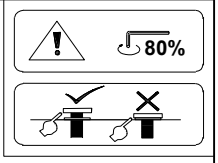

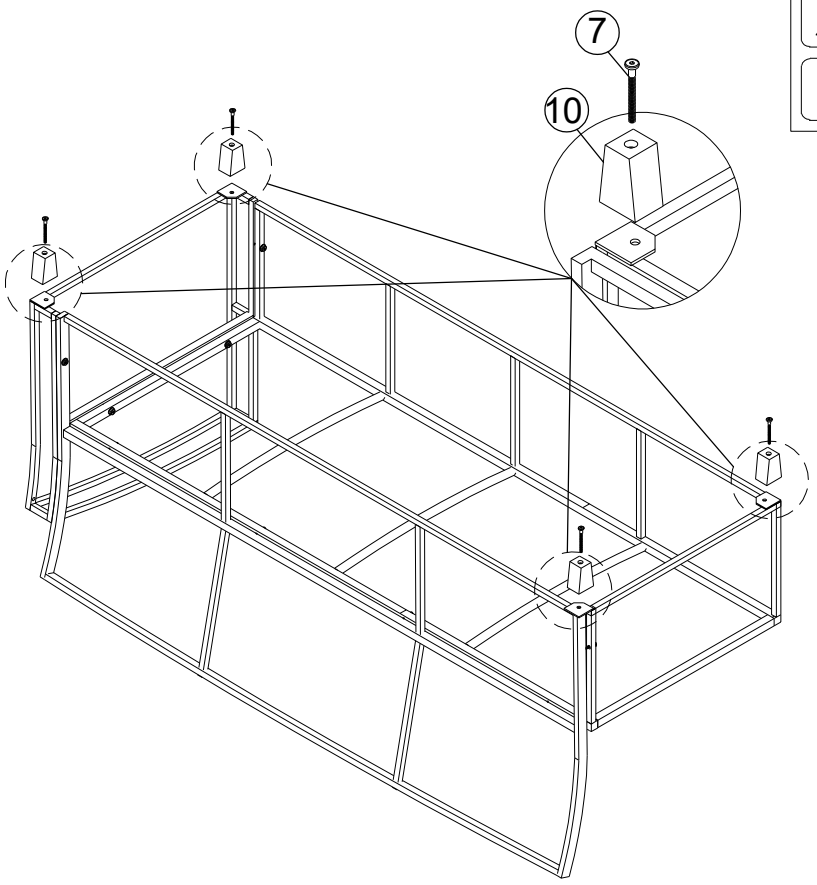


IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.


STEP 13

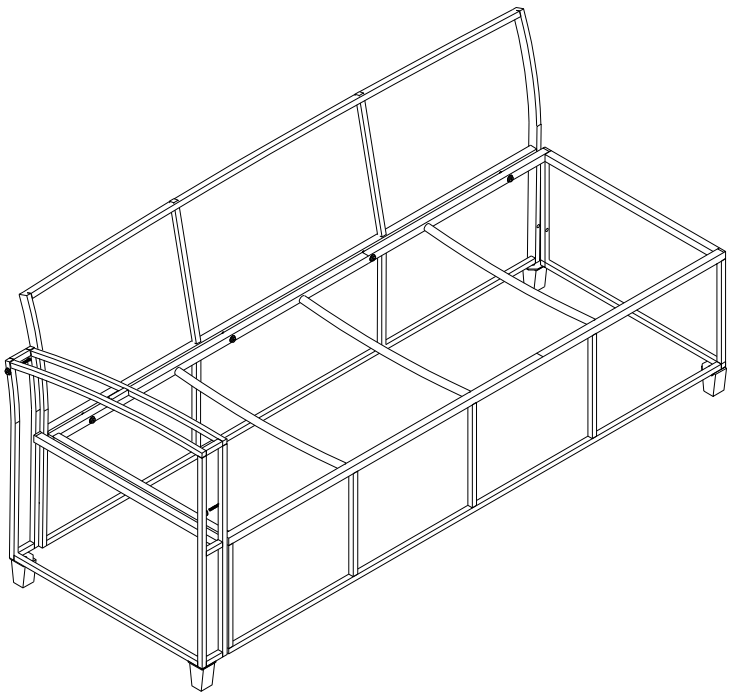

STEP 14

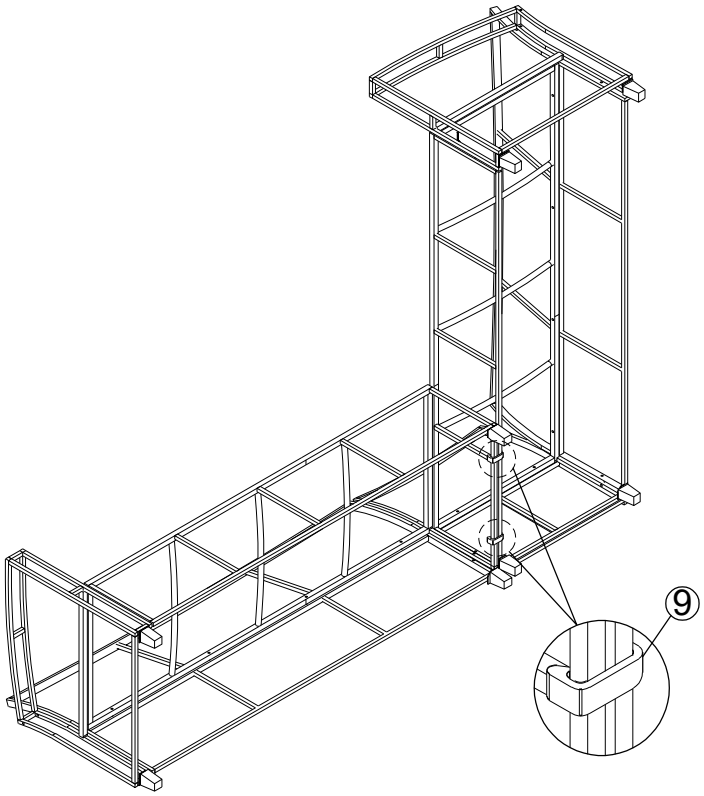


STEP 15

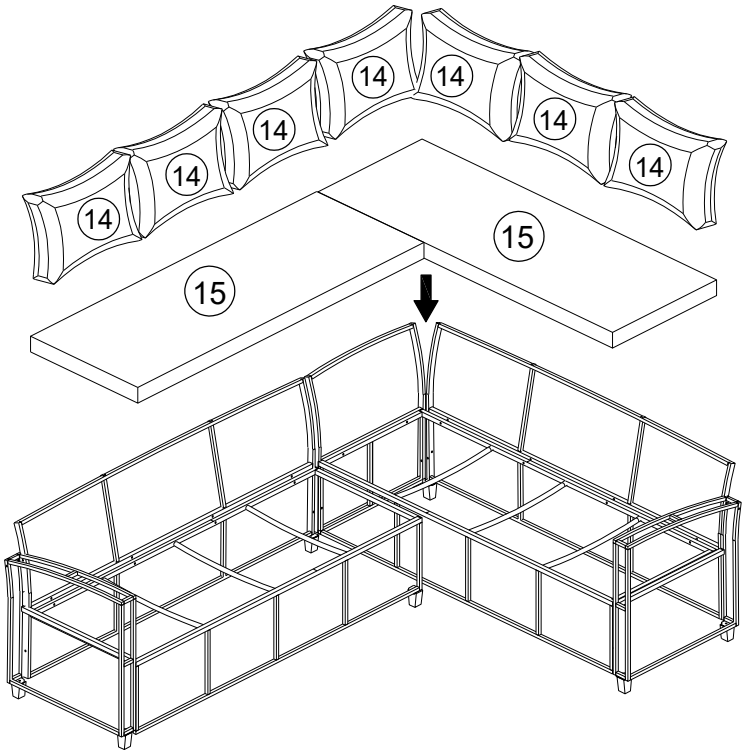

IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.


STEP 16

1	M8x 25MM	8
2	Ø18x1 MM	8

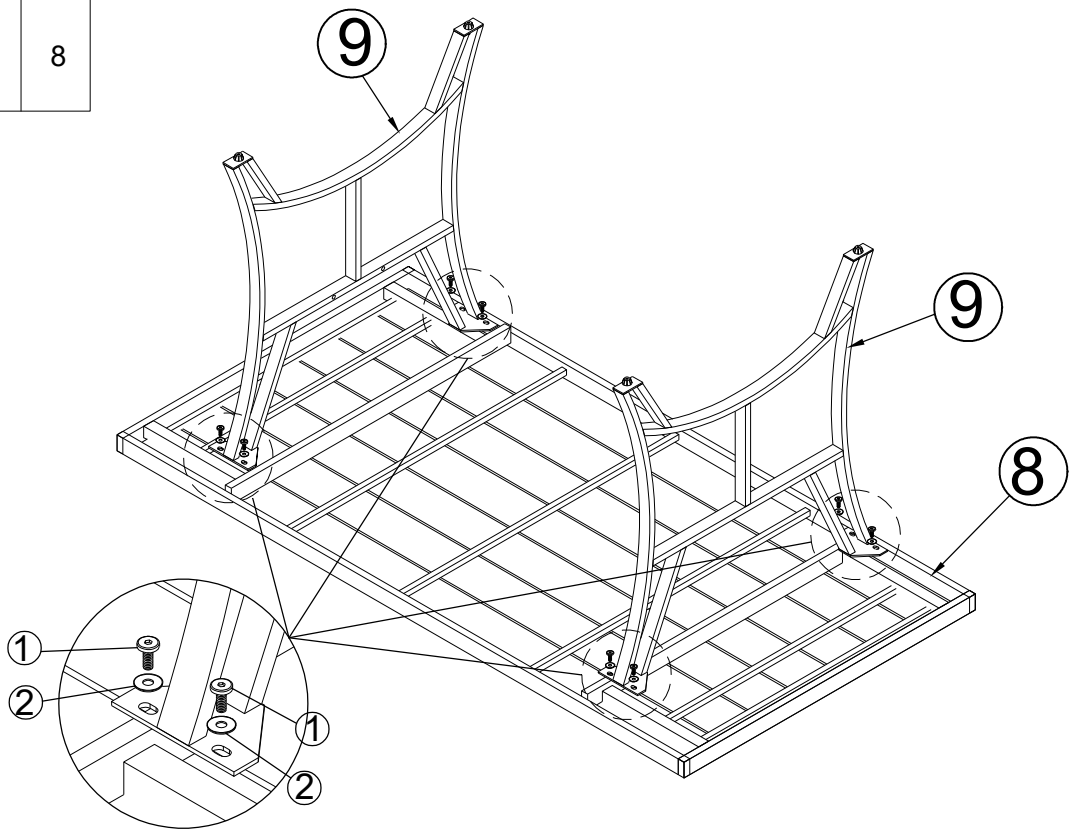

STEP 17


3	FLAT WASHER Ø16	8
12	M6x 15MM	8

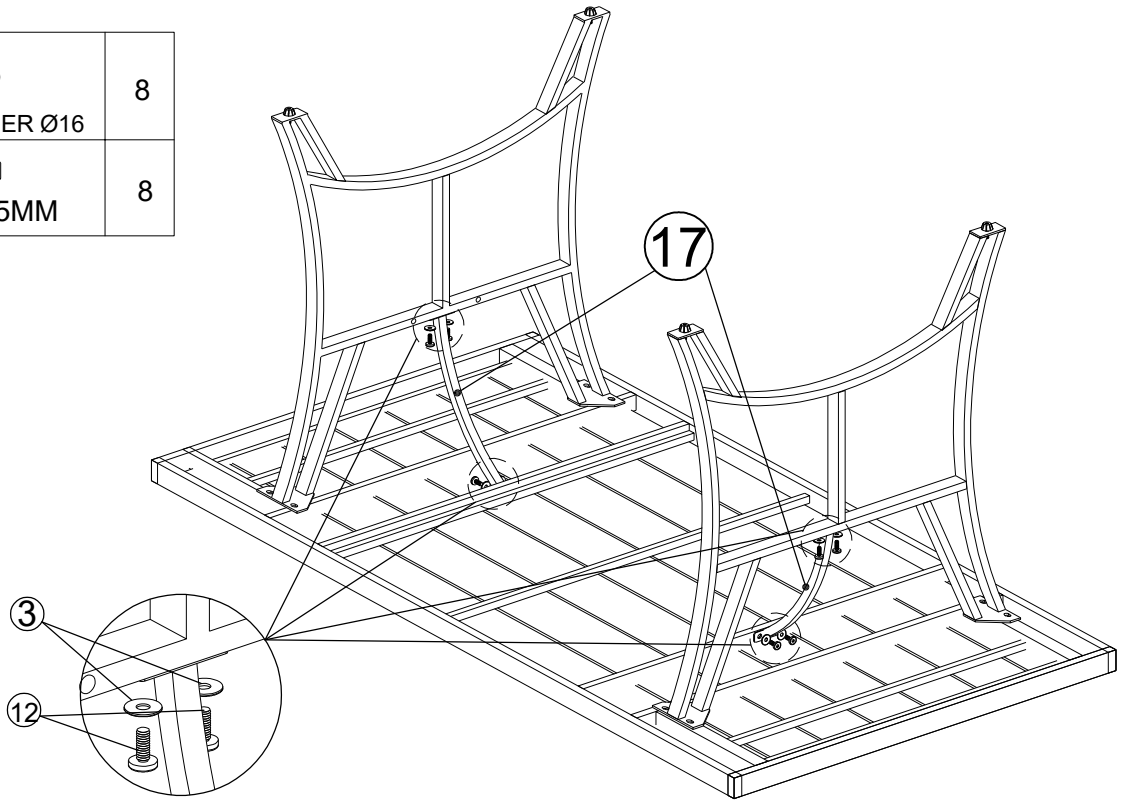

IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.

STEP 18

3	 FLAT WASHER Ø16	4
4	 M6x 30MM	4

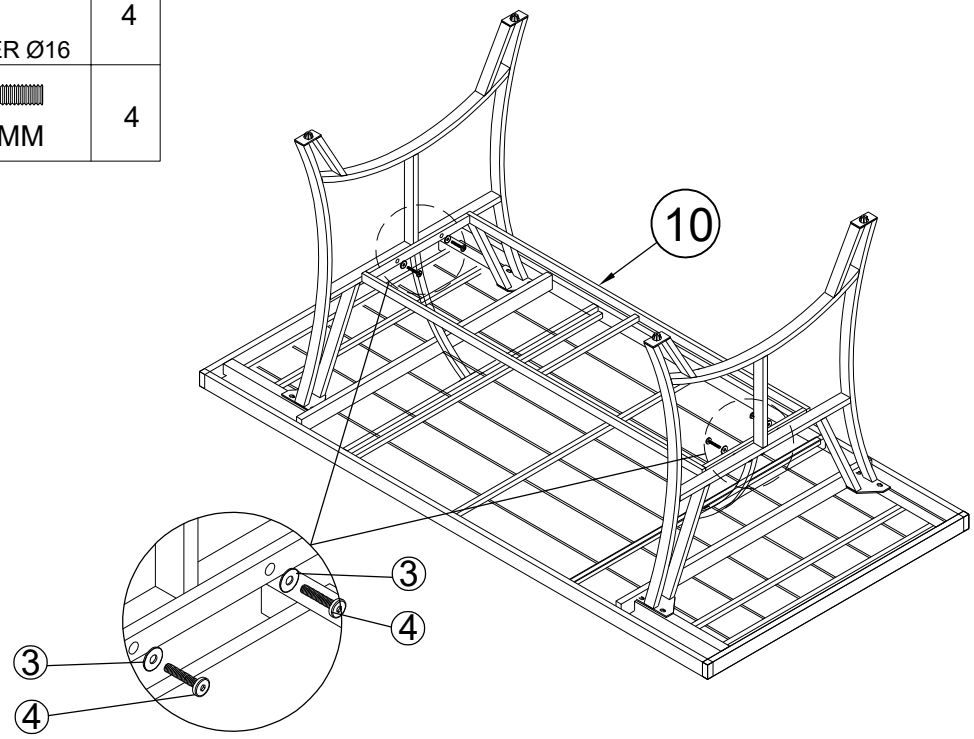


STEP 19



IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.

STEP 20

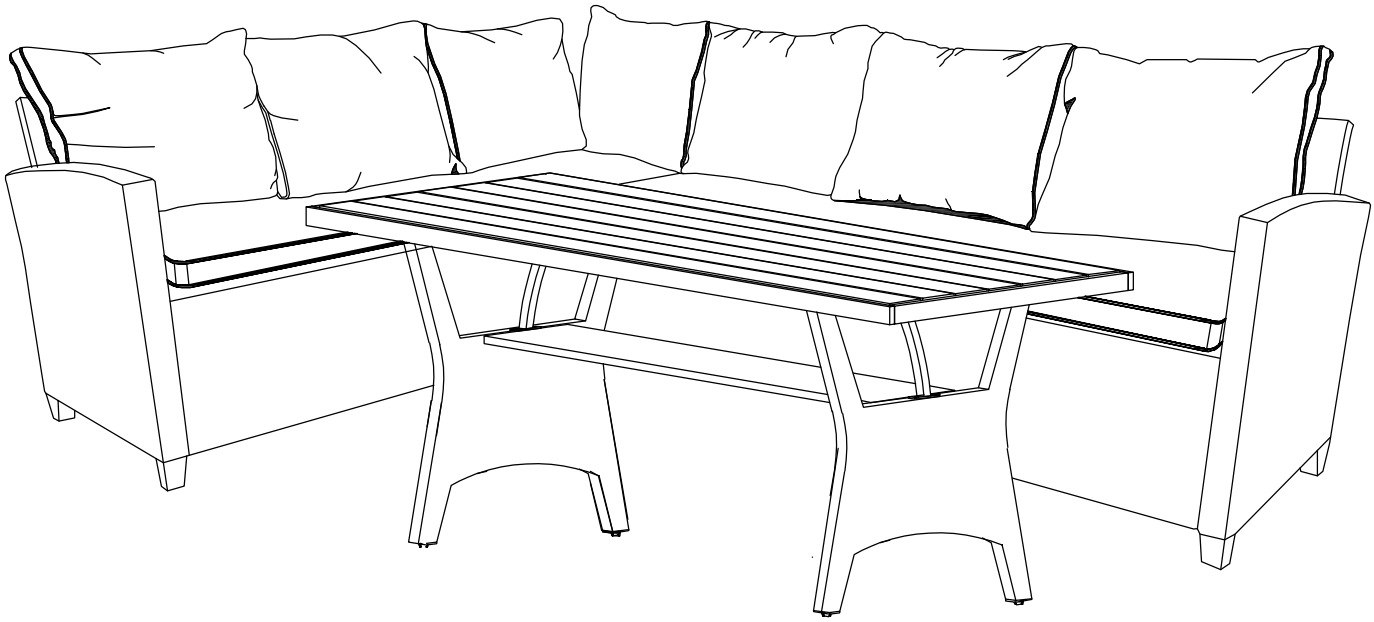

IMPORTANT NOTE :
Do not tighten all screws bolts until all completely assembled
Thank you.